



INSTALLATION AND OPERATION
USER MANUAL

WWW.UNICORECOMM.COM

UB4B0

GPS/BDS/GLONASS/Galileo

All-Constellation Multi-Frequency High

Precision Board

Copyright© 2009-2017, Unicore Communications, Inc.

Data subject to change without notice.

Revision History

Version	Revision History	Date
Ver. 1.0	First release	Aug. 2017

Disclaimer

Information in this document is subject to change without notice and does not represent a commitment on the part of Unicore Communications, Inc. No part of this manual may be reproduced or transmitted in any form or by any means, electronic or mechanical, including photocopying and recording, for any purpose without the express written permission of a duly authorized representative of Unicore Communications, Inc. The information contained within this manual is believed to be true and correct at the time of publication. © Copyright 2009-2017 Unicore Communications, Inc. All rights reserved.

Foreword

This <User Manual> offers you information in the features of the hardware, the installation, specification and use of Unicore UB4B0 product.

For the generic version of this manual, please refer to different part of the manual according to your purchased product configuration, concerning CORS, RTK and Heading.

Readers it applies to

This <User Manual> is applied to the technicians who know GNSS Receiver to some extent but not to the general readers.

Content

1	OVERVIEW	3
1.1	KEY FEATURES	4
2	INSTALLATION	4
2.1	PACKAGE INSPECTION	4
2.2	ESD PROTECTION	5
2.3	BOARD OVERVIEW	6
2.4	INSTALLATION GUIDE	7
3	PC UTILITY CONFIGURATION (UPRECISE)	12
3.1	OVERVIEW.....	12
3.2	OPERATION STEPS.....	13
4	FIRMWARE UPDATE (WINCONFIG)	14
5	HARDWARE INTERFACE	20
5.1	POWER INPUT.....	20
5.2	RF INPUT	20
5.3	EXTERNAL CLOCK INPUT	20
5.4	SERIAL PORT ACCESS.....	21
5.5	PIN FUNCTION	21
	APPENDIX I MECHANICAL DRAWING.....	25
	APPENDIX II TECHNICAL SPECIFICATIONS.....	26

1 Overview

Thank you for purchasing and using UB4B0 GPS/BDS/GLONASS/Galileo ALL-Constellation Multi-Frequency High Precision OEM Board. The UB4B0 can provide reliable centimeter-level accuracy and high accuracy heading output at high update rate .UB4B0 employ the new generation all-constellation multi-core high precision SoC chip, Nebulas-II (432 channel tracking), based on mature base line chip (XINGYUN), 55nm low power consumption, built in broadband ADC and anti-interference unit, integrated two 600MHz ARM processor and special High speed floating point processor, provides more powerful satellite navigation signal process ability. UB4B0 provide millimeter-lever carrier-phase observation data and centimeter-lever RTK position Output, supports advanced multi-path mitigation and low angle tracking; UB4B0 is suitable for high precision surveying and mapping application, especially for geodetic surveying engineering survey, deformation monitoring, mechanical control, meteorological monitoring, Precision agriculture, Continuous operation reference station (CORS) etc. advanced instantaneous RTK and long-distance RTK.



Fig 1-1 UB4B0 Board

1.1 Key Features

- Based on Nebulas-II new generation multi-system multi-frequency high-performance SoC Chip
- 432 channels, super tunnel and dedicated fast acquisition engine
- Support BDS、GPS、GLONASS、Galileo、SBAS and QZSS etc.
- Hardware size compatible with current GNSS OEM boards
- Support GPS/BDS/GLONASS/Galileo single system positioning and multi-system positioning
- Support advanced multi-path mitigation and low angle tracking
- Support Rover station RTK
- Millimeter-level Carrier-phase Observation Data
- High reliability、High stability、suitable for challenging environment
- On board MEMS integrated navigation *
- Support RS232, Ethernet, 1PPS, external clock input

2 Installation

This section contains the list of the product package and the details of product installation.

2.1 Package Inspection

Please check the contents of the package carefully after receiving the package of UB4B0:

- UB4B0 board and EVK suite (or evaluation board) (or enclosure)
- User manual (CD attached)
- Command manual (CD attached)
- UPrecise software (CD attached)



- MMCX antenna cable
- Cross serial Port cable

2.2 ESD Protection

A lot of components on UB4B0 are susceptible to electrostatic damage, which affects IC circuits and other components. Please follow the instructions below for ESD protection before opening the plastic package:

- Electrostatic discharge (ESD) can damage components. Please use under anti-static work bench, a conductive foam pad, and at the same time, wearing an anti-static wrist strap. If ESD workstation is not available, wear an anti-static wrist strap and attaching it to metal parts of your industrial PC in order to obtain protection against static electricity.
- Please use the edge of the board, avoiding to touch the components on the board while fetching or putting the boards
- Please carefully check for obviously loose or damaged components after removing the package from the boards. Any questions, please contact your local dealer.

Please save package boxes and plastic containers, for storage and transport.

2.3 Board Overview

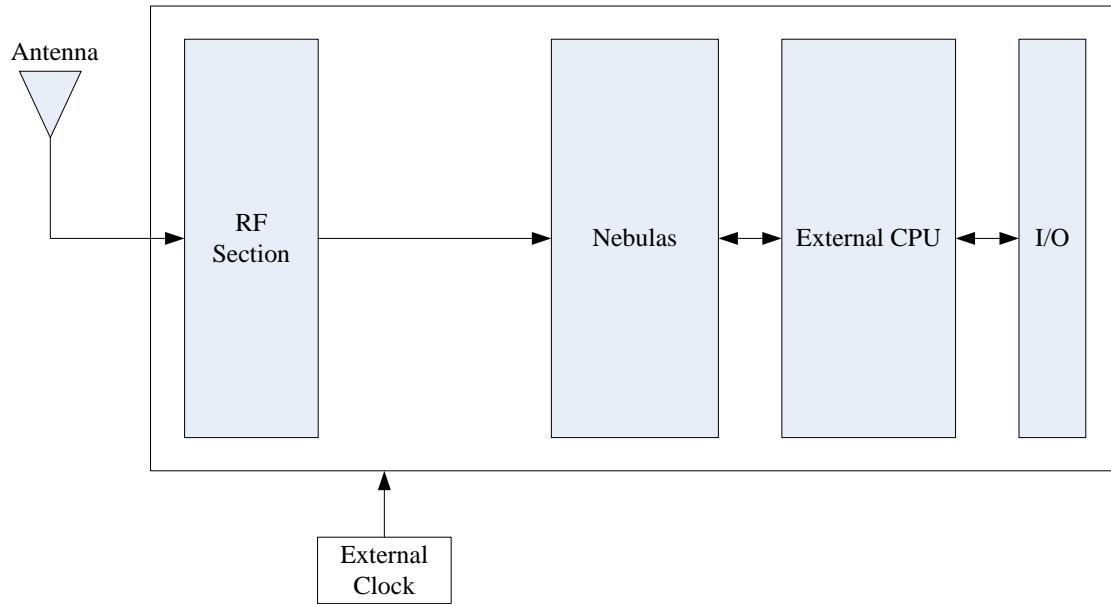


Fig 2-1 structure diagram

1. RF part

The receiver gets filtered and enhanced GNSS signal from the antenna via a coaxial cable. The RF part convert the RF input signals into the IF signal, and convert IF analog signal into digital signals required for Nebulas die (UC4C0).

2. Nebulas SoC (UC4C0)

Nebulas-II (UC4C0) is Unicore' s new generation high precision GNSS SoC with 55nm low power design, supports up to 12 digital intermediate frequency or 8 analog intermediate frequency signals, which can track 12 navigation signals with 432 channels.

3. MEMS*

This is an optional function. If selecting GNSS+INS, UB4B0 is integrated on-board



MEMS chip, which can maintain excellent application experience even in the most challenging environments such as urban canyons, and can effectively solve the interruption of the positioning data caused by the satellite signal covered. It can provide continuous, high quality and high output rate positioning results. In addition, UB4B0 also supports odometer Input and external high-precision IMU interface, providing better integrated navigation and positioning performance.

4. 1PPS

UB4B0 provides 1 PPS with adjustable pulse width and polarity and 1 output pulse width.

5. Event

UB4B0 provides 1 Event Mark Input.

6. I/O

Power input, data communication port, pulse trigger, LED etc.

2.4 Installation Guide

UB4B0 is delivered as a board, users can flexibly assemble according to the scenario and the market need. Figure below shows the typical installation of UB4B0 with evaluation kit (EVK), users can also use other enclosures to install receiver, using the same method.

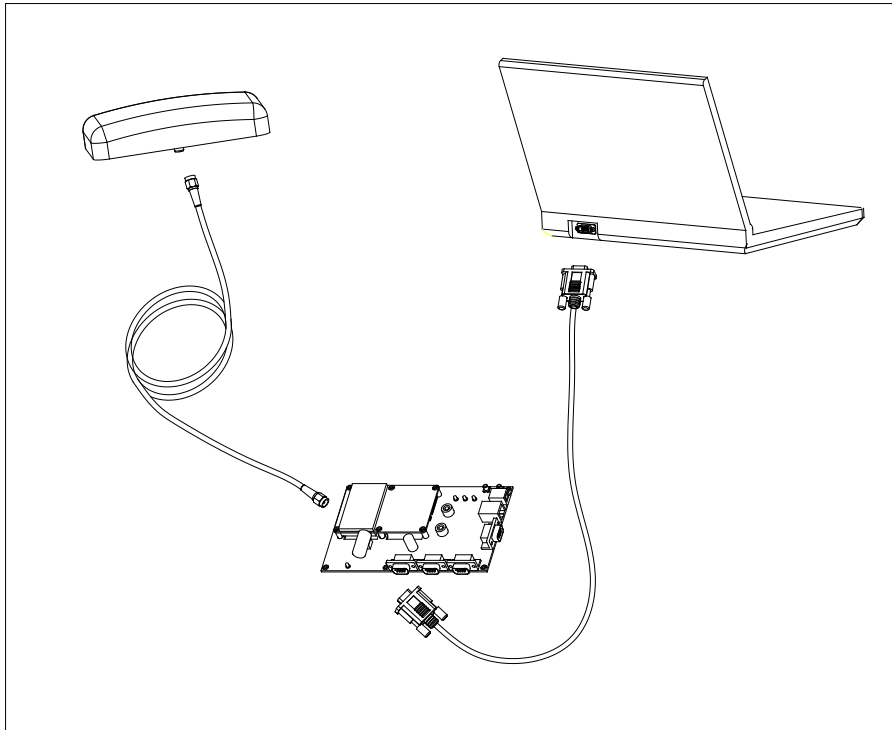


Fig 2-2 UB4B0 installation

For efficient installation, please get prepared for the following items before installation:

- UB4B0 EVK suite (or evaluation board) (or enclosure)
- User manual
- Command manual
- UPrecise software (CD attached)
- Qualified antenna
- MMCX antenna cable
- PC or Laptop with serial ports (Windows XP/Win7 or later), with UPrecise installed

After the above preparation is made, please follow the steps below to install: :

Following the steps below to install the device:

1. Align UB4B0 positioning holes and pins with EVK, and fix UB4B0 in the EVK. EVK provides power supply and standard communication interface for the board, to communicate with peripheral devices (such as PC, USB devices¹, and so on)..

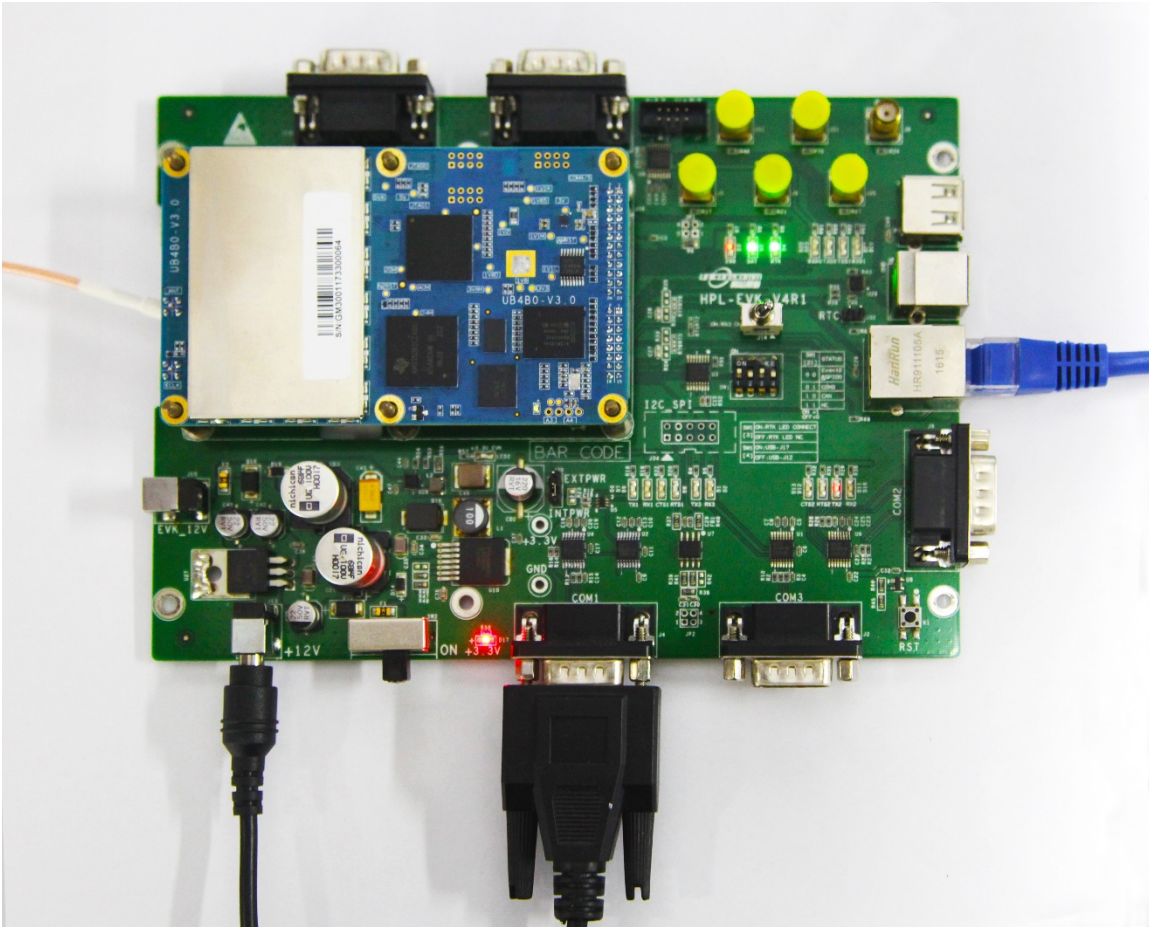


Fig 2-3 installation step 1

2. Select a GNSS antenna with appropriate gain, and mount it in a open sky area. Connect the antenna to J1 MMCX port of UB4B0 via coaxial RF cable.

¹ Only for manufactory test

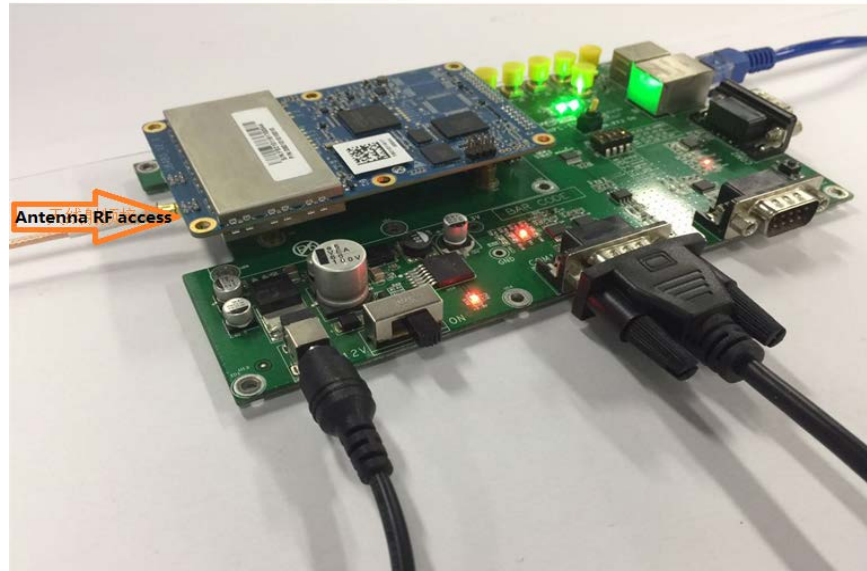


Fig 2-4 installation step 2

The RF connector of the board is MMCX, please select the appropriate cable. The signal gain to board RF connector should be within 25 to 35dB. The Antenna connector provides 5VDC antenna feed.

3. Connect the PC with EVK through serial ports, or through Ethernet ports.

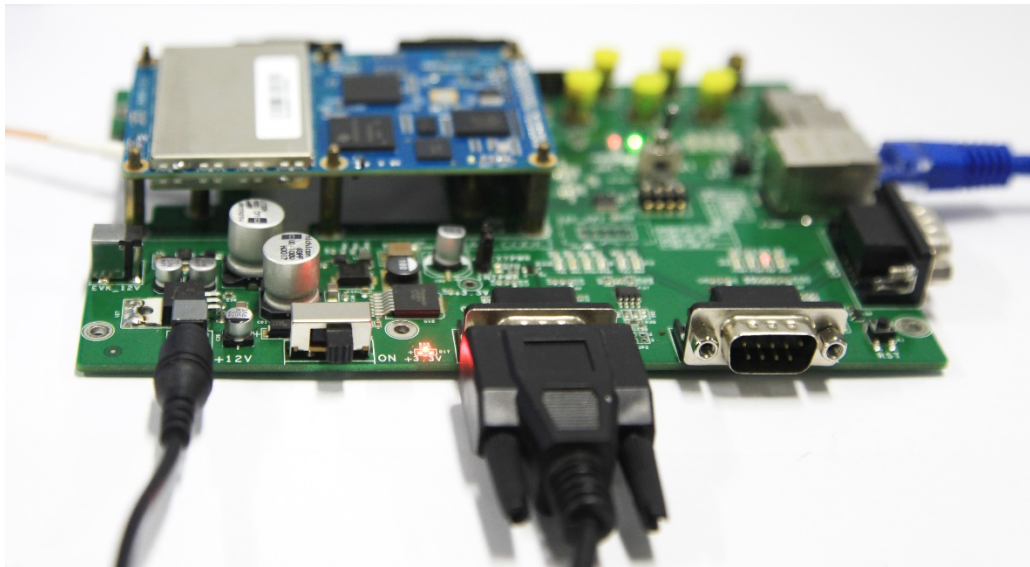


Fig 2-5 installation step 3

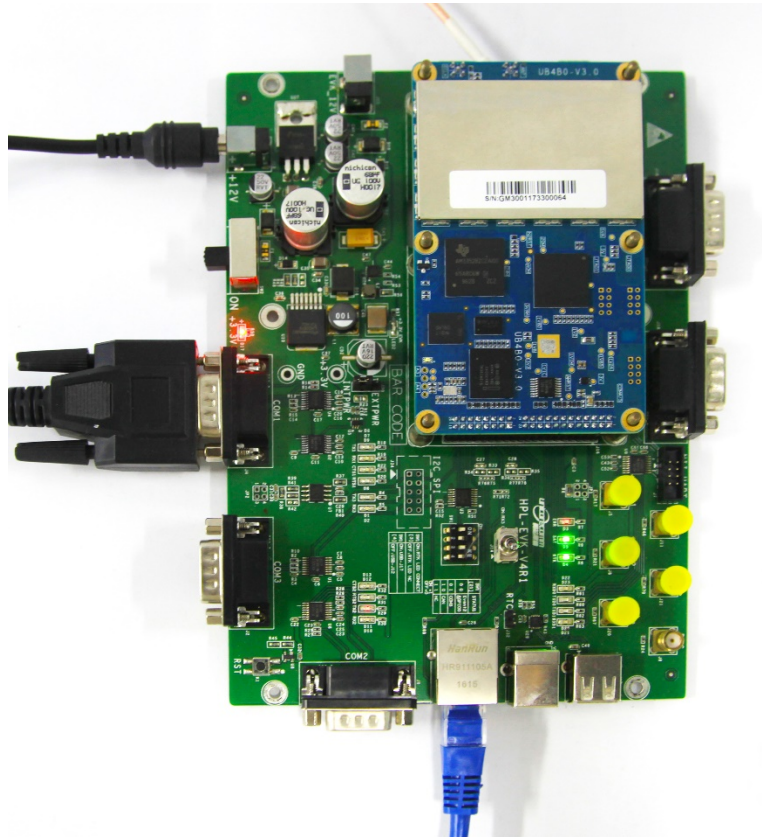


Fig 2-6 installation step 3

4. Connect a 12V adapter with the EVK power input, and switch on to power the device

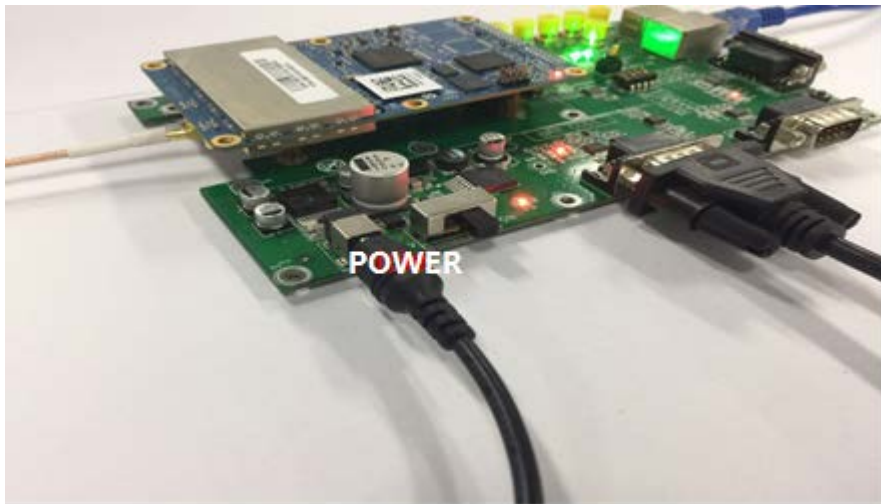


Fig 2-7 installation step 4

5. Start UPRECISE on the PC
6. Refer to UPRECISE online help to send commands or log data for the receiver

Note: In case the card has not been in use for a long time, or the distance from last time used location is above 1000Km, a slower fix may occur. In that case, please use the FRESET command to clear the older ephemeris and Almanac information (this command will also clear the Board setup information). After the FRESET command is executed, the board will be reset, it will take 15 minutes to collect new ephemeris and Almanac information.

3 PC Utility Configuration (UPrecise)

3.1 Overview

UB4B0 Unicore UPRECISE (Control and Display Tool) provides a user-friendly graphical interface to control and display the operation of your receiver. User can access the functionality and information just through several clicks.

UPrecise The following features are included in UPRECISE :

- Connect the receiver, configure the baud rate
- Graphic window for displaying Position of satellite, PRN, and Signal/Noise Ratio (Constellation View)
- Historical and present Trajectory of the receiver and display Position velocity, and time (Trajectory View)
- Graphic interface for data logging, send commands to the Receiver (Logging Control View)
- Console window for sending command to receiver (Console View)

- Sending commands to the Receiver
- The trajectory view for displaying the present point and the past point of the Receiver
- Upgrading the firmware
- TTFF test

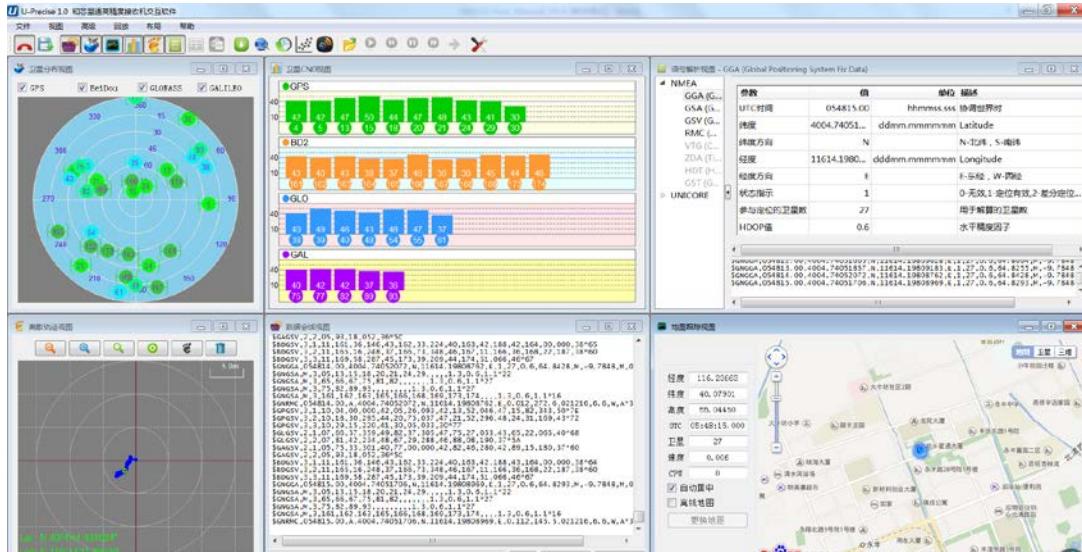


Fig 3-1 UPrecise Overview

3.2 Operation Steps

1. Follow the tutorial to install the board, and turn on the EVK switch
2. Click file - > connect the serial port, set the baud rate, the default baud rate is 115200bps

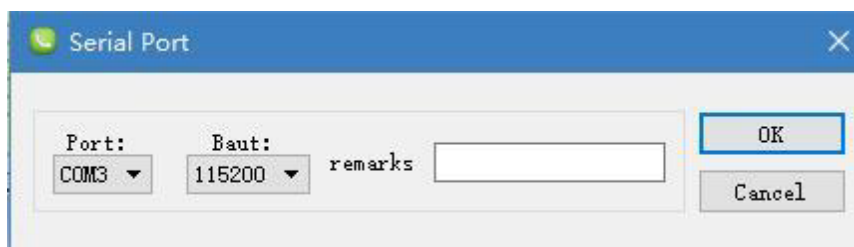


Fig 3-2 Configure baud rate

3. Click the receiver settings button to configure the NMEA message output. It is recommended to configure GPGGA, GPGSV, and other messages.

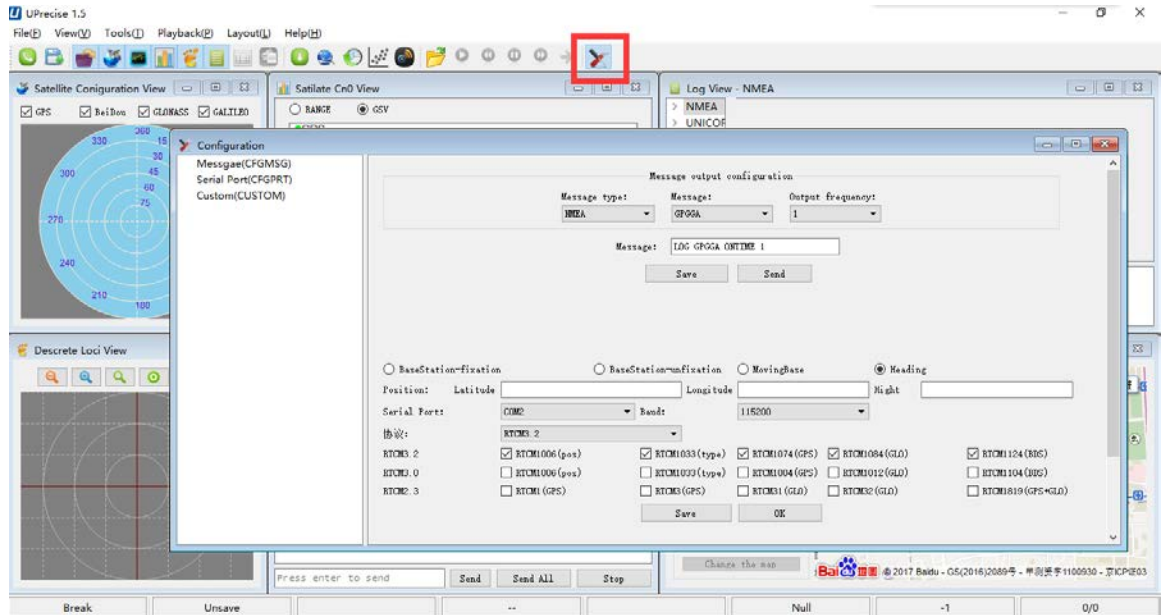


Fig 3-3 configure NMEA output

4. Click the receiver settings button, configure the NMEA message output, and click send. It is recommended to configure GPGGA, GPGSV, and other statements. or
5. In the dialog window, click on "Send all Message" to complete all the NMEA message output (update rate 1Hz). Right click in the data session window to adjust: output log font size, stop / resume log output, or clear log content
6. Configure or type commands according to requirements in various UPrecise views

4 Firmware Update (WinConfig)

WinConfig(in the attached CD) software is used for the remote update of UB4B0, please follow the steps below to install the software:

👉 During the firmware update of the board, please stop all the operations to the device, including the cutoff of the power supply.

Step 1: Click the program icon to run the software:



Figure 4-1 WinConfig Welcome Interface

Step 2: Click “Next” to browse the firmware update package:

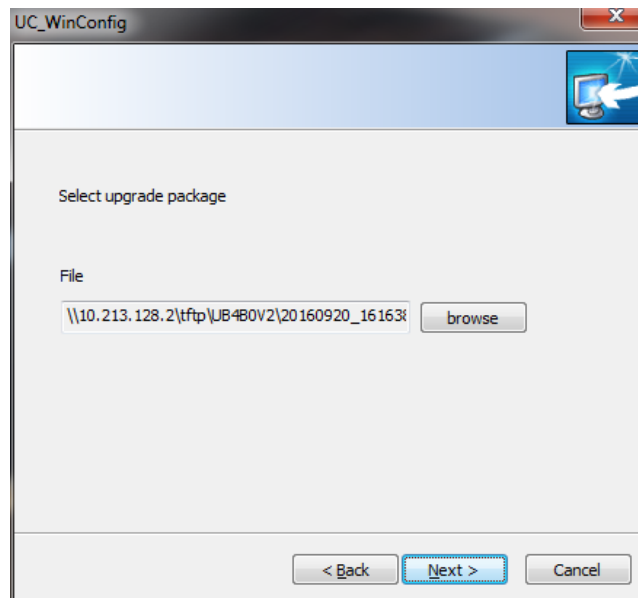


Figure 4-2 Select Firmware Update Package

Step 3: Click “Next” to display the communication type:

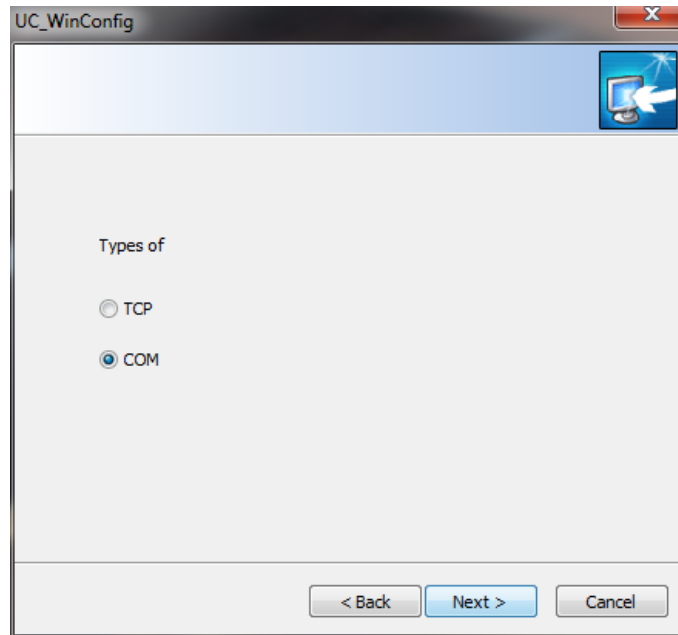


Figure 4-3 Select Communication Type

Step 4: Select the communication type as through Serial Port(COM), click “Next” to configure:

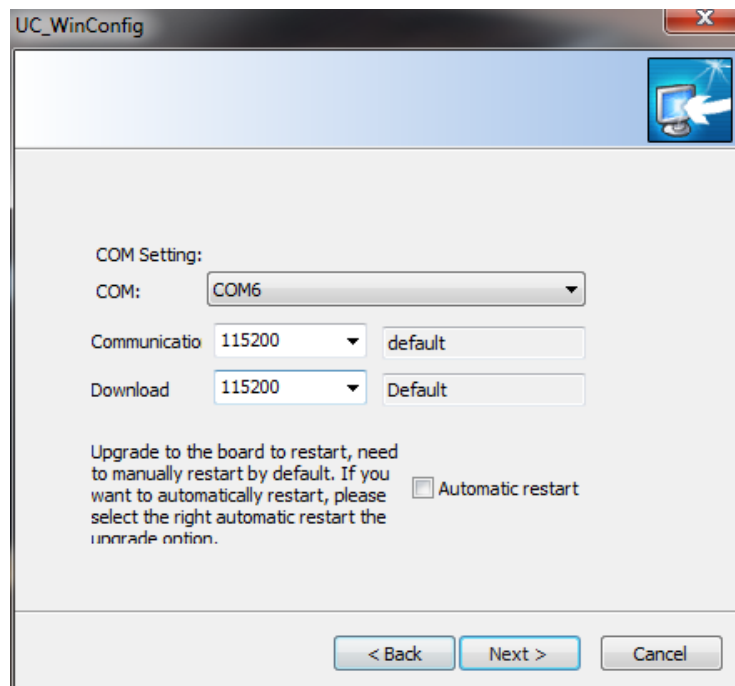


Figure 4-4 Serial Port Communication Configuration

 Please use COM1 to update firmware.

Step 5: After the configuration of the COM port, click “Next” to prompt the configuration summary dialog:

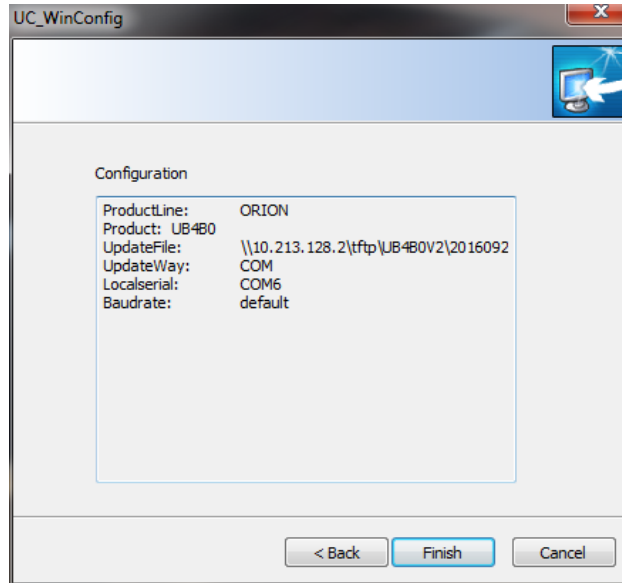


Figure 4-5 Serial Port Upgrade Configuration Summary

Step 6: Check the summary to make sure the receiver is correctly configured, then click “Finish” to prompt the Upgrade window:

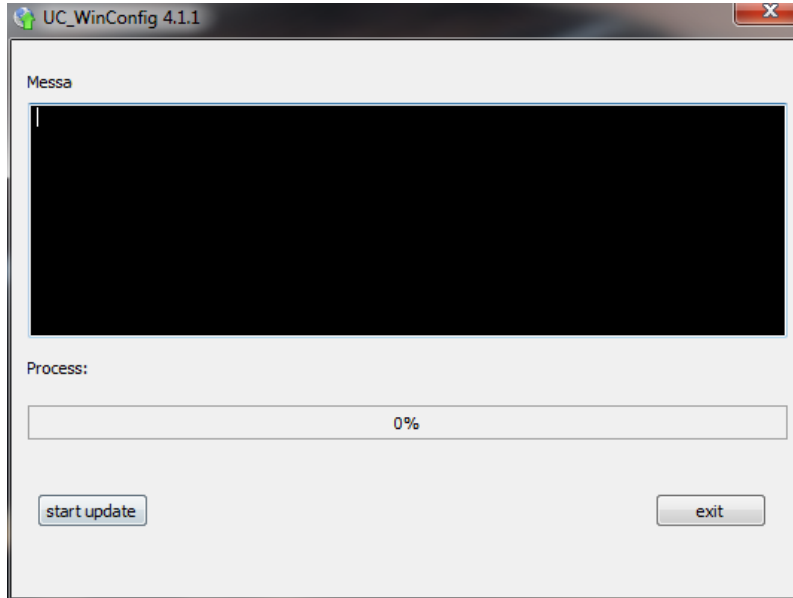


Figure 4-6 Firmware Upgrade Window

Step 7: Click "Upgrade" to start the firmware upgrading process:

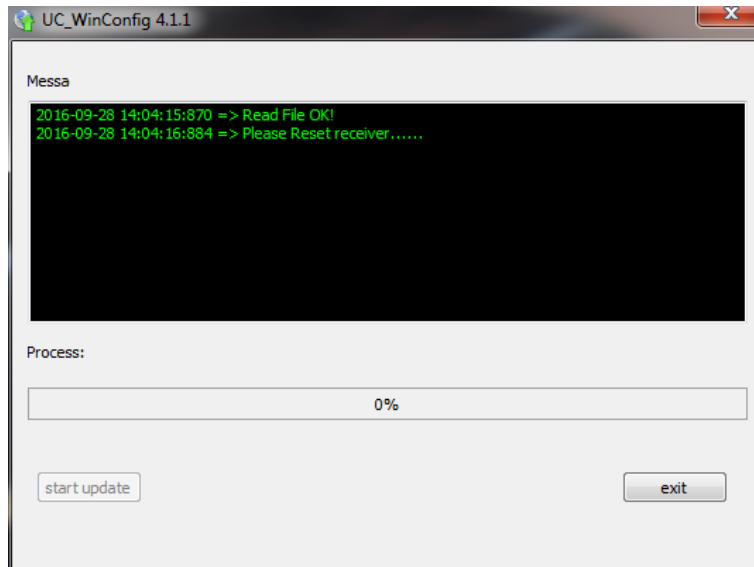


Figure 4-7 Serial Port Upgrade Success

☞ The "Upgrade" button is gray and can't be clicked while the receiver is in the upgrading process, unless the upgrade is complete, or an error occurs during the upgrade process.



Step 8: Check the firmware upgrading process is finished successfully:

5 Hardware Interface

This chapter is a brief introduction about UB4B0 receiver I/O port and Electrical Characteristics, please connect correctly in case unnecessary damage

5.1 Power Input

Index	Description
Acceptable velocity Input range	3.3V +5%/-3%

Note: Please avoid switching power supply frequently, it is recommended that the switching interval is greater than 5s.

5.2 RF Input

Index	Description
RF Input	-85 dBm ~ -105 dBm
signal Input	BDS B1/B2/B3 + GPS L1/L2+GLONASS L1/L2+Galileo E1/E5a/E5b
LNA power supply	+4.75 ~ +5.10 VDC, 0 ~ 100 mA

5.3 External clock Input

Index	Description
External clock Input	Frequency: 10 MHz Voltage Peak: 1.2V~1.8V Frequency Stability: max \pm 0.5 ppm Waveform: Sine

5.4 Serial port access


Index	Description
Baud Rate	115200bps by default

Note: When configuring the serial port, make sure that the baud rate matches the data amount and confirm that the baud rate set by your hardware device is supported. Otherwise, an exception may occur.

5.5 Pin Function

UB4B0 provides dual row 2x12 pin (2.0mm pitch) as main interface.

As following:

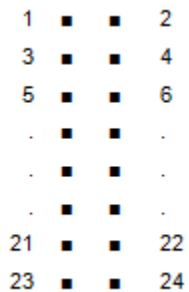


No.	Signal	Type	Description	Note
1	GND	Ground	Ground Reference	
2	RTK LED	Output	RTK LED	LVTTL , High level effective
3	Reserved	RSV	RSV	RSV
4	PPS	Output	Time Mark Output	LVTTL

No.	Signal	Type	Description	Note
5	VCC	Power	Supply Voltage, +3.3V	+5%/ - 3%
6	VCC	Power	Supply Voltage, +3.3V	+5%/ - 3%
7	Rx3 or Event2	Input	External Event 2 Default: COM3 Receive Data	LVTTL
8	Event1	Input	External Event 1	LVTTL
9	ERROR	Output	Error Detected LED	LVTTL , Low Level effective
10	Satellite LED	Output	Satellite LED	LVTTL , Low Level effective
11	CTS2	Input	COM2 Clear to Send	LVTTL
12	RESETIN	Input	Hardware reset	LVTTL, Low Level effective, duration >20us
13	RTS2	Output	COM2 Request to Send	LVTTL
14	RxD2	Input	COM2 Receive data	LVTTL
15	CTS1	Input	COM1 Clear to Send	RS-232
16	TxD2	Output	COM2 transmit data	LVTTL
17	RTS1	Output	COM1 Request to Send	RS-232
18	RxD1	Input	COM1 receive data	RS-232
19	TxD3 or GPIO0	Input / Output	General Purpose I/O Default: COM3 Transmit Data	LVTTL
20	TxD1	Output	COM1 transmit data	RS-232
21	USB D (-)	Input/Output	USB D -	

No.	Signal	Type	Description	Note
22	USB D (+)	Input/Output	USB D+	
23	GND	Ground	GND	
24	GND	Ground	GND	

In addition, UB4B0 provides a 10/100M Ethernet interface、CAN、Odometer interface, with dual row 2x8 pin (2.0mm pitch) .


As following:

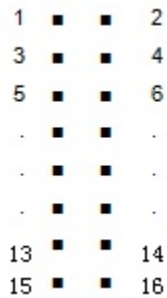

No.	Signal	Function	Description
1	ETH_RD-	Negative electrode of Ethernet receiving data, Differential pair.	Connect to RD-
2	ETH_RD+	Positive electrode of Ethernet receiving data, Differential pair	Connect to RD+
3	CENT_RD	Ethernet interface transformer center receives taps	Connect to RD Center Tap
4	ETH_TD+	Positive electrode of Ethernet receiving data, Differential pair	Connect to TD+

5	ETH_TD-	Negative electrode of Ethernet receiving data, Differential pair.	Connect to TD-
6	CENT_TD	Ethernet interface Transformer center send taps	Connect to TD Center Tap
7	ETH_LINK	Ethernet interface connect indicator light LOW Level: connection building; High Level: ununited;	
8	ETH_SPD	Ethernet interface network speed indicator LOW Level: 100Mbps High Level: 10Mbps	
9	GND	Ground	GND
10	CAN_TX	CAN bus transmit data	
11	CAN_RX	CAN bus receive data	
12	PPS2	1PPS Output	LVTTTL
13	GND	Ground	GND
14	SPEED	Odometer velocity Input	
15	FWR	Odometer direction message Input	
16	GND	Ground	GND

Appendix I Mechanical drawing

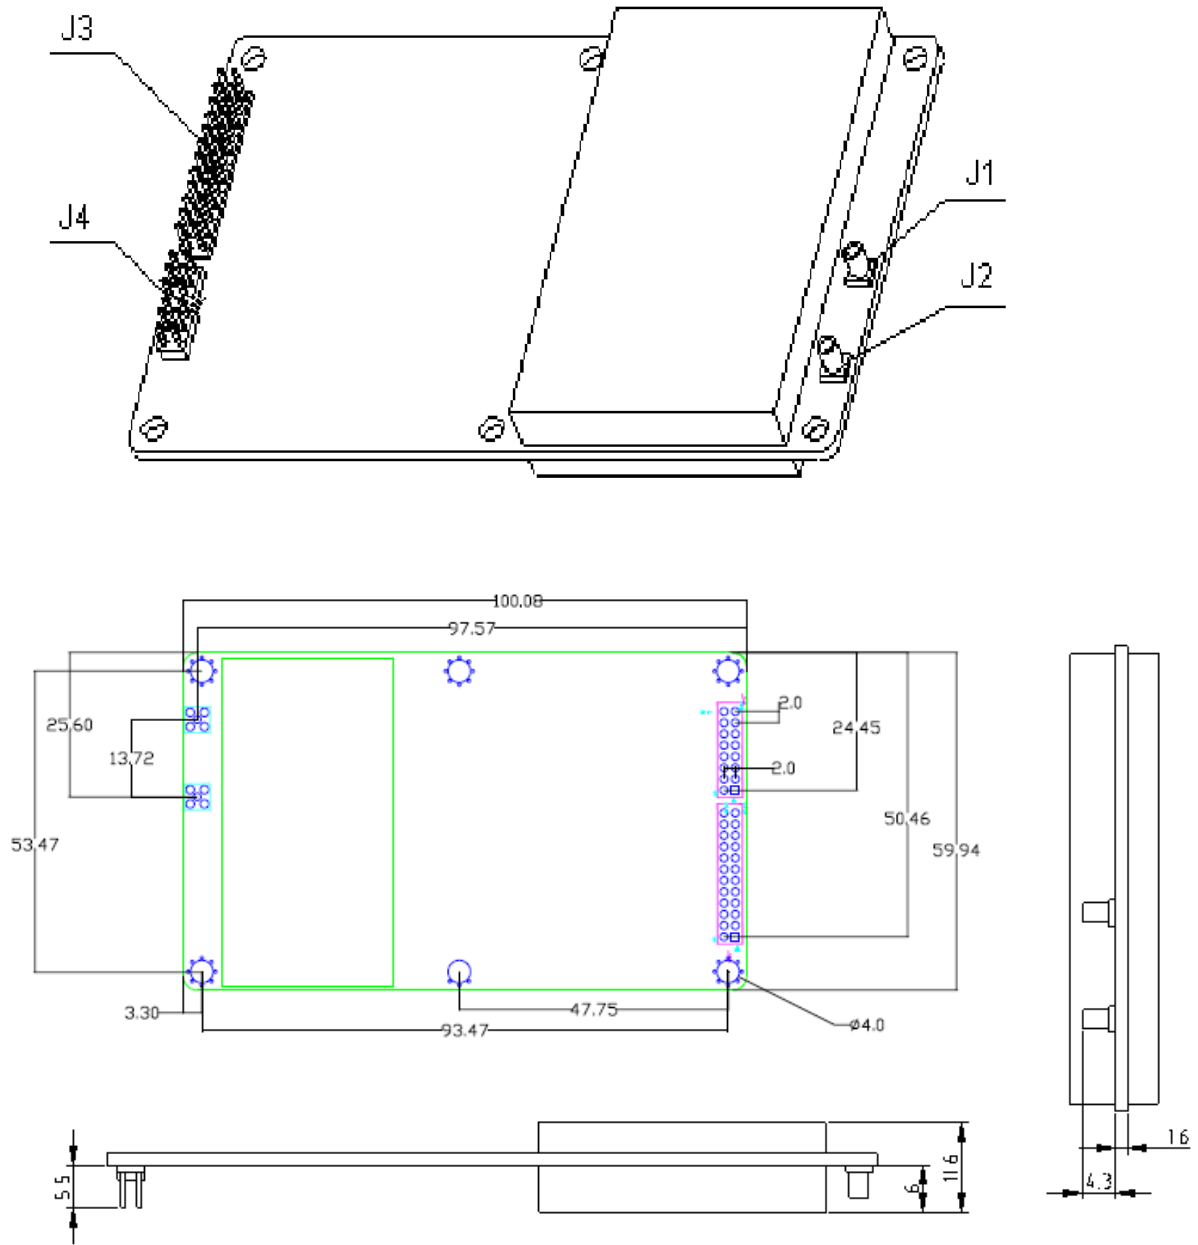

J1: MMCX female, GNSS antenna interface

J2: MMCX female, 10M external clock interface

J3: 2x12 dual row pin (2.0mm pitch)

J4: 2x8 dual row pin (2.0mm pitch)

Appendix II Technical Specifications

Performance Specifications

Channels	432 channels, based on Nebulas-II SoC chip	Initialization time	<10s(Typical)
Frequency	BDS B1/B2 /B3 GPS L1/L2/L5 GLONASS L1/L2 Galileo E1/E5a/E5b		
Single point positioning (RMS)	Horizontal :1.5m Vertical: 3.0m	Initialization reliability	> 99.9%
		Time to First Fix	Cold start: 45s
RTK (RMS)	Horizontal: 1cm+1ppm	Differential data	RTCM 2.X/3.X CMR
	Vertical: 1.5cm+1ppm	Data formats	NMEA-0183 , Unicore
Measurement Precision (RMS)	BDS GPS GLONASS Galileo	Update Rate	20Hz
B1/L1 C/A/E1 code	10cm 10cm 10cm. 10cm	Time accuracy(RMS)	20ns
B1/L1/E1 Carrier	1mm 1mm 1mm 1mm	Velocity	0.03m/s

Phase					accuracy(RMS)	
B2/L2P(Y) /E5b code	10cm	10cm	10cm	10cm	Network Protocol	NTRIP、HTTP、FTP
B2/L2/E5b Carrier Phase	1mm	1mm	1mm	1mm		
B3/L5/E5a code	10cm	10cm		10cm		
B3/L5/E5a Carrier Phase	1mm	1mm		1mm		

Physical Specifications

Dimension	100×60×11.4 mm
Weight	48g
Work temperature	-40℃~+85℃
Storage temperature	-55℃~+95℃
Humidity	95% non-condensing
I/O Connectors	2x12 Pin 2x8 Pin
Antenna□Input	MMCX
External clock input	MMCX
Vibration	GJB150.16-2009, MIL-STD-810
Shock	GJB150.18-2009, MIL-STD-810

Electrical Specifications

Voltage	3.3VDC +5%/ - 3%
LNA	4.75~5.10V, 0~100 mA

Voltage Ripple	100mV p-p (max)
Power Dissipation	2.8W (typical)

Functional Ports

Serial	1x UART (RS-232), 2 x UART(LV-TTL), 460800bps
Internet access	1x LAN, 10/100M
1PPS interface	LV-TTL